

1 On/Off

**HOP!**  
*Cook & Crispy*

2 On/Off control unit



3 Cooking programs (0-99)

4 Timer selector



5 Temperature selector



6 Temperature Display



7 Time Display

8 Decrease button



9 Increase button



10 Cooking cycle number

11 Cooking cycle

12 Rotating basket selector





13 Start/Stop



14 USB connect

*ispy*

	Nome ricette	Fasi	Tempo	Temperatura	Rotazione (0-4)
	PATATINE ZIG ZAG	1	9 min.	230°C	4
	PATATINE 6X6	1	8 min.	230°C	4
	PIZZETTE DI SFOGLIA	1	12 min.	190°C	0
	PATATE COUNTRY	1	10 min.	230°C	4
	PATATE DOLCI AMERICANE	1	11 min.	220°C	4
	HAMBURGER6	1	7 min.	230°C	0
	MOZZARELLINE PANATE	1	6 min.	230°C	2
	INVOLTINI PRIMAVERA	1	7 min.	230°C	0



ALETTE DI POLLO

1

7 min.

230°C

3



FILETTI DI PESCE PANATO

1

7 min.

230°C

0



NUGGETS DI POLLO

1

7 min.

230°C

3



SCHNITZEL

1

8 min.

235°C

0



FILETI DI POLLO

1

8 min.

230°C

3



VERDURE PASTELLATE

1

8 min.

235°C

2



ANELLI DI CALAMARO

1

3 min.

230°C

2

2

4 min.

230°C

4



ANELLI DI CIPOLLA

1

4 min.

230°C

2

2

5 min.

230°C

4